

TIP-SOP-008 - Using Air Operated Tow Hitch

Sop Title:	Using Air Operated Tow Hitch	Sop No:	TIP-SOP-008
Sop Location:	Multiple	Associated SWMS:	TIP-SWMS-008
Date of Issue:	1/05/2025	Next Review Date:	1/05/2027
Issue Version:	1.0	Authorised By:	Jeremy Wee
Frequency:	When required		
Purpose:	Uncouple and couple truck and dog		
Responsibility:	Tipper driver	Requirements:	UHF radio Maxi park brake alarm Overhead power lines alarm Correct site PPE - High Visibility clothing - Long Pants & Sleeves - Hard Hat - Safety Boots - Safety Glasses - Gloves - Hearing protection if required
Compliance:		PPE Requirements:	
- WHS Act 2011 - WHS Regulation 2017			

Step	Activity	Safety/ Quality/ Performance Notes	Photo
1.	 Arrive at 	- Ensure positive communication	
	designated	- Use designated uncouple/ couple area	
	uncoupling/	- If uncoupling on street be mindful of	
	coupling	legal parking and not to be blocked in	
	area	from coupling the dog trailer	



TIP-SOP-008 - Using Air Operated Tow Hitch

Step	Activity	Safety/ Quality/ Performance Notes	Photo
2.	Uncouple the vehicle combination	 Ensure firm and level ground Ensure truck and dog aligned straight Perform a tug test If unsuccessful refer to maintenance reporting system If successful, continue with uncoupling procedure Exit vehicle Ensure to wear gloves Create safe work zone if required 	OFFINANCE OF THE PROPERTY OF T
		Driver side	
		 Lower drawbar support leg Disconnect air lines Disconnect ABS/EBC plug Disconnect hydraulic hose where applicable Do not step on or over the drawbar 	
		Passenger side	
		 Disconnect tailgate air lines Disconnect electrical plug Disconnect hydraulic hose Unlock the tow hitch control box Turn on the red handle Raise the yellow handle Check that the tow hitch pin is in up position If the pin did not raise, enter the cab and gently reverse to release the pressure on the pin then drive forward to separate truck from dog trailer You can leave the tow hitch control box open while tipping near the dog trailer or to drive through the plant to tip truck off If uncoupling to run rigid follow the next step 	
3.	De-energising the air operated tow hitch	 To drive as a rigid, you need to deenergise the air operated tow hitch Once uncoupled the dog trailer Exit the cab Ensure to wear gloves Lower the yellow handle Turn the red handle to off position Close the tow hitch control box Using the bannister brush, push the tow hitch pin up until you hear a click in the hitch and the pin lowers down Ensure red safety button is in lock position Continue as rigid 	



TIP-SOP-008 - Using Air Operated Tow Hitch

- 4. Couple the vehicle combination
- Reverse up to dog trailer, stopping 1m from the drawbar
- Exit the cab and check the height and alignment of the drawbar to the tow hitch
- Ensure to wear gloves
- May require to lower truck air bags or adjust the height of the drawbar
- To lower the drawbar, holding on to the drawbar for balance, have one foot in front of the drawbar support leg and with other leg gently kick the support leg towards your other leg to lower the drawbar
- If drawbar too low, using correct manual handling technique, with both hands holding the tow eye, bent knees, use the legs to lift the drawbar to required level
- Open the tow hitch control box
- Turn on the red handle and turn the yellow handle to raised position
- Ensure the pin is in raised position
- Then lower the yellow handle so it's ready to engage the tow eye
- Enter cab and reverse gently, until audible sound is heard
- Perform a tug test to ensure dog trailer correctly coupled
- Apply park brakes, turn on park lights and hazard indicators
- Exit cab
- Ensure to wear gloves

Driver side

- Visually and physically check that the tow hitch pin is in place, safety red button locked in
- Ensure to wear gloves
- Raise the drawbar support leg
- Connect air lines, ABS/ EBC plug
- Connect hydraulic hose where applicable
- Ensure the hydraulic coupling locking collar is turned ¼ turn
- Do not step on or over the drawbar

Passenger side

- Connect hydraulic plug
- Connect electrical plug
- Connect tailgate air lines
- Turn the red handle to off position
- Lock the tow hitch control box and return key to its storage location









TIP-SOP-008 - Using air operated tow hitch

Step	Activity	Safety/ Quality/ Performance Notes	Photo
		 Walk around the dog trailer to check clearance light, indicators and brake tail lights Enter the cab If daytime turn off park lights Turn off hazard lights Perform tug test 	
5.	Exit designated uncouple/ couple area	 Remove safe work zone if set up Exit designated uncouple/ couple area Positive communications Follow site TMP and road rules 	

Prepared By / Review Team			
Name	Position	Signature	Date
Marko Kasap	Driver Trainer / Safety Committee Member	AK.	1/05/2025
Victoria Piserchia	Supervisor	Ø	1/05/2025

Authorisation I have checked this Standard Operating Procedure (SOP) and confirm that it is authorised for use.		
Jeremy Wee	Jony.	1/05/2025