



# Blacktown Concrete Plant

# Traffic & Pedestrian Management Plan

## Emergency Site Map

Boral Concrete - Fourth Avenue, Blacktown



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Emergency Equipment



**Main Electrical**  
Located in Loading Bay (ground floor)



**Spill Kit**  
Located outside the Admixture bund area



**Emergency Eye Wash**  
Located behind Admixture bund area (beneath conveyor)



**First Aid**  
Located in Batching office (upstairs) & Site office (downstairs, next to Driver's room)



**Emergency Assembly Area**  
Located at entrance to the Visitor & Employee Car Park



**Fire Extinguishers**  
Located in the following areas:  
Entrance to Batch Office (upstairs), Driver's room, Site Office (downstairs), Outside Amenities area, Loading Bay (top level), Outside Loading Bay, Overhead Bins, Front End Loaders, all trucks are equipped with fire extinguishers.






# Traffic & Pedestrian Management Plan

## Visitor Site Map



### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant



#### Vehicle Route

Follow the direction of the vehicle route. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



#### Visitor Parking

- Visitors park in the Visitor & Employee parking area
- Parking is reverse entry
- All visitors must report to the Batch office immediately upon arrival (located upstairs). Follow the pathway directional arrows to and from the Batch office, as indicated on the map.



#### Site Speed Limit

The site speed limit is restricted to 10kph



#### Front End Loader (FEL) and Forklift


- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.






# Traffic & Pedestrian Management Plan

## Courier Site Map

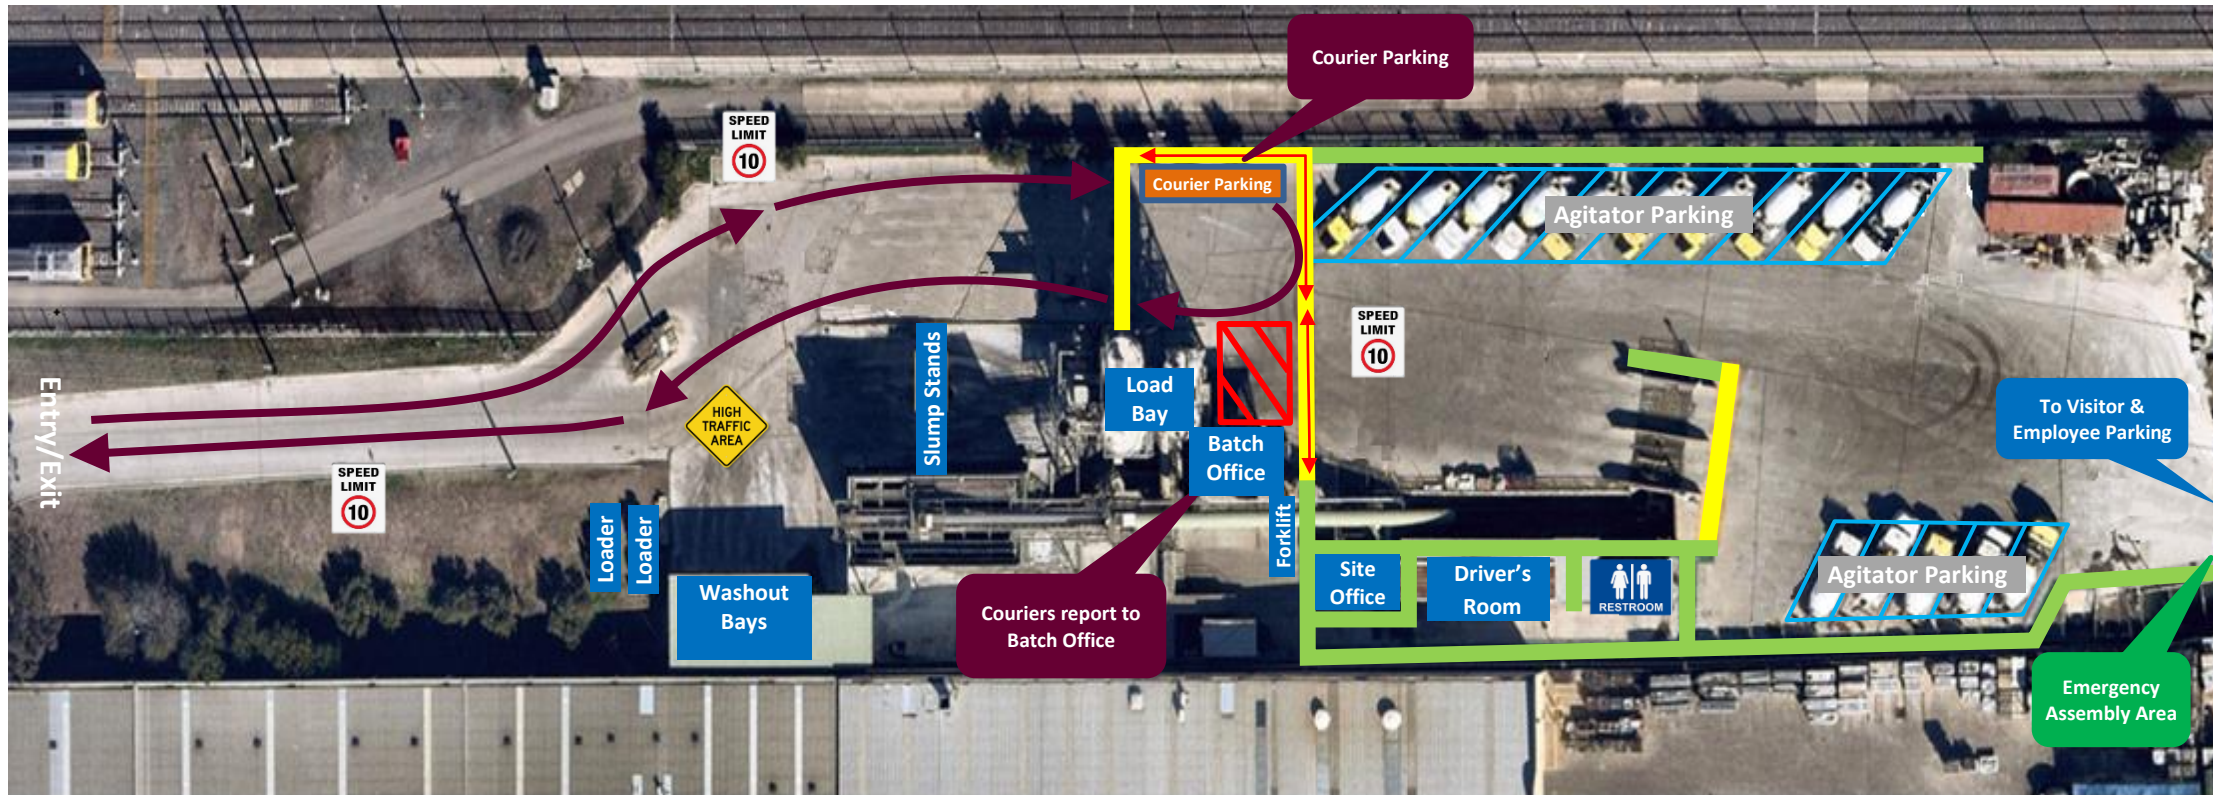(Light Vehicle)



### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant



#### Vehicle Route

Follow the direction of the vehicle route. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



#### Courier Parking

- Couriers park in the Courier parking area
- Report to the Batch office upon arrival (located upstairs). Follow the pathway directional arrows to and from the Batch office, as indicated on the map.



#### Site Speed Limit

The site speed limit is restricted to 10kph.



#### Front End Loader (FEL) and Forklift

- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.



# Traffic & Pedestrian Management Plan

## Heavy Vehicle Delivery Site Map

(Requiring Forklift Removal)



**Pedestrians**

**Protected Walkway**

**Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant

**Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

**Vehicles and Plant**

**Vehicle Route**  
Follow the direction of the vehicle route. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.

Unloading area

**Heavy Vehicle Delivery Location**  
To access the office, follow the pathway directional arrows, as indicated on the map.

SPEED LIMIT 10

**Site Speed Limit**  
The site speed limit is restricted to 10kph.

**Front End Loader (FEL) and Forklift**

- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.



## Tipper Site Map

(Driver must contact office on UHF channel 14 upon arrival on site)



### Pedestrians

**Protected Walkway**

**Designated Walkway**

Pedestrians **MUST** give way to vehicles and plant

**Pedestrian Exclusion Zone**

Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

#### Vehicle Route

Follow the direction of the vehicle route, steps 1 - 5.

- At step 1, park in Waiting area 1 and radio the office on UHF channel 14 for clearance. If the material bins are unavailable, you will be instructed to park in Waiting area 2.
- When ready to proceed to the Material bins, follow step 3.
- Once the discharging is complete, follow steps 4 & 5 to exit the site.

Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work. To access the office, follow the pathway directional arrows, as indicated on the map.

#### Tipper Discharge Location - Forward entry

**Waiting area 1** - On arrival on site, park in Waiting area 1 and radio the office on UHF channel 14 for clearance.

**Waiting area 2** - If the discharge location is unavailable, you will be instructed to park in Waiting area 2.

#### Site Speed Limit

The site speed limit is restricted to 10kph.

#### Front End Loader (FEL) and Forklift

- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.








## Powder Tanker Site Map

(Driver must contact office on UHF channel 14 prior to entering site)



### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant



#### Vehicle Route

- Follow the direction of the vehicle route, steps 1 – 5.
- At step 1, forward entry to the discharge points.
  - Once the discharging is complete, follow steps 2 – 5 to exit the site.
- Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



#### Powder Tanker Discharge Location

**Location 1** – Enviro, SL  
**Location 2** – Fly Ash, SL  
 To access the office, follow the pathway directional arrows, as indicated on the map.



#### Site Speed Limit


The site speed limit is restricted to 10kph






#### Front End Loader (FEL) and Forklift

- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.

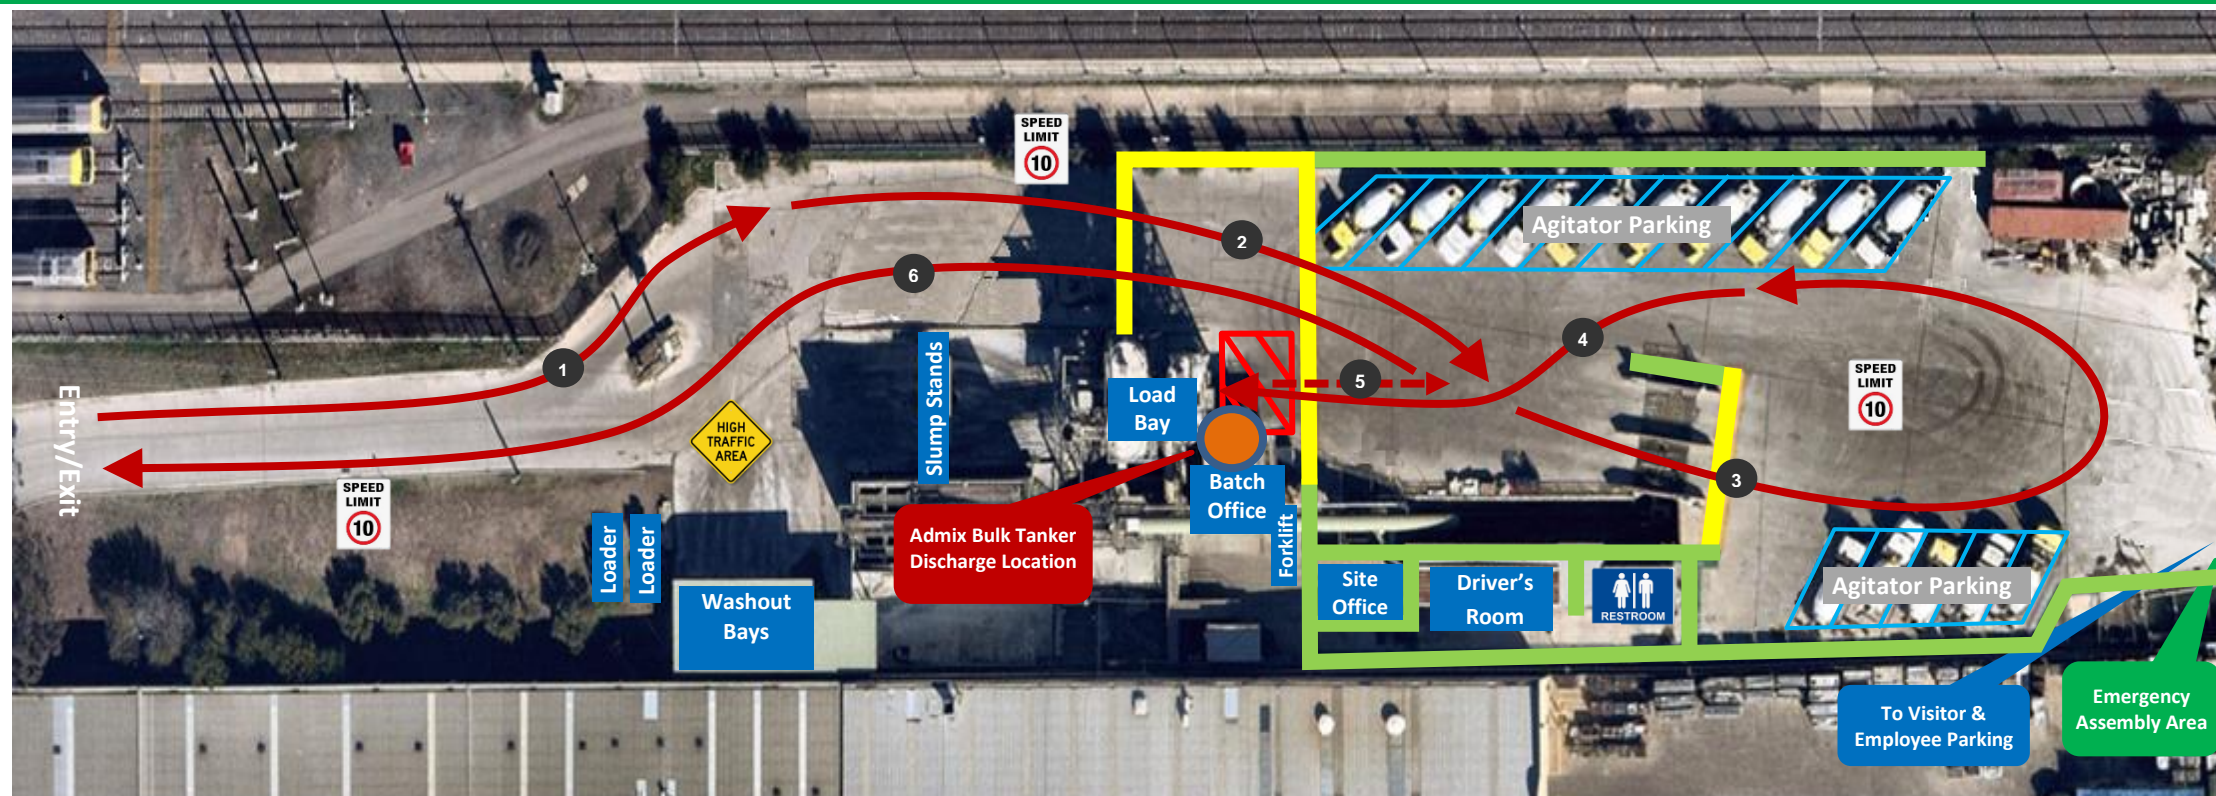








### Pedestrians


-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant




-  **Vehicle Route**  
Important: Drivers **MUST** contact the office to schedule a delivery time, prior to arriving on site.  
Follow the direction of the vehicle route, steps 1 - 6.  
 - At step 5, reverse back from the discharge point once the discharging is complete.  
 - Follow step 6 to exit the site.  
 Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
-  **Reverse Exit**
-  **Admix Bulk Tanker Discharge Location**  
Forward Entry
-  **Site Speed Limit**  
The site speed limit is restricted to 10kph.
-  **Front End Loader (FEL) and Forklift**
  - Operate in all areas.
  - Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.

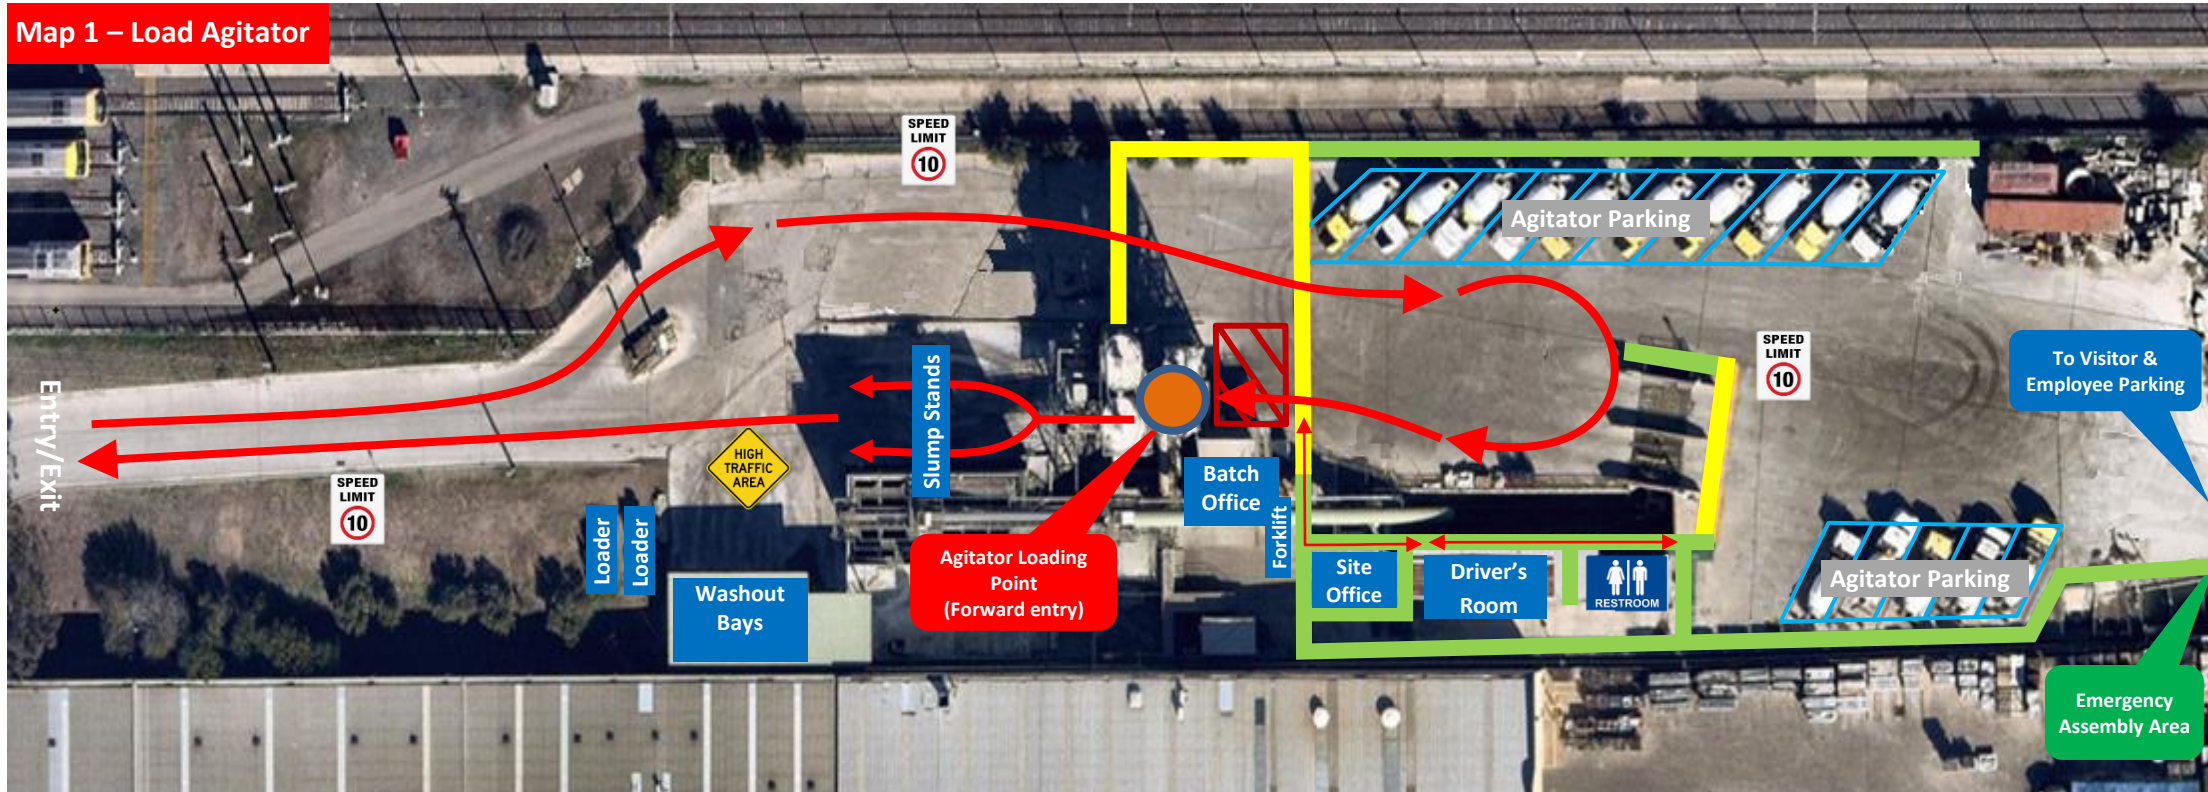

Map 1 – Load Agitator



#### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

#### Vehicles and Plant



##### Vehicle Route

Follow the direction of the vehicle route. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



##### Agitator Loading Point - Forward Entry

To access the office, follow the pathway directional arrows, as indicated on the map.



##### Slump Stands - Forward Entry



##### Site Speed Limit

The site speed limit is restricted to 10kph



##### Front End Loader (FEL) and Forklift

- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.



Map 2 – Washout



#### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

#### Vehicles and Plant

- Vehicle Route**  
Follow the direction of the vehicle route, steps 1 - 6. Once Washout is complete, follow step 7 to Agitator parking bays or to continue to Loading Bay. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
- Reverse Entry**
- Washout Bays - Reverse entry**
- Agitator Parking Bays - Reverse angle parking**  
To access the office and amenities, follow the pathway directional arrows, as indicated on the map.
- Site Speed Limit**  
The site speed limit is restricted to 10kph
- Front End Loader (FEL) and Forklift**
  - Operate in all areas.
  - Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.






# Traffic & Pedestrian Management Plan

## Loading Washout Waste Site Map





(Driver must contact office on UHF channel 14 prior to entering site)



### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

-  **Vehicle Route**  
Follow the direction of the vehicle route steps 1 - 6. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
-  **Washout Waste Loading Location**
-  **Site Speed Limit**  
The site speed limit is restricted to 10kph.
-  **Front End Loader (FEL) and Forklift**
  - Operate in all areas.
  - Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.



# Traffic & Pedestrian Management Plan

## Contractor Site Map



**Pedestrians**

**Protected Walkway**

**Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant

**Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

**Vehicles and Plant**

**Vehicle Route**  
Follow the direction of the vehicle route. Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.

Contractor Parking

**Contractor Parking**

- Contractors park in the Contractor Parking area.
- Upon arrival, report to the Batch office for further instructions (located upstairs). Follow the pathway directional arrows to and from the Batch office, as indicated on the map.

SPEED LIMIT 10

**Site Speed Limit**  
The site speed limit is restricted to 10kph

Forklift

**Front End Loader (FEL) and Forklift**

- Operate in all areas.
- Have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF channel 14.