



# Dubbo Concrete Plant

## Emergency Site Map

Boral Concrete – Jannali Rd, Dubbo



 
### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Emergency Equipment




**First Aid**  
Located in Driver's Room

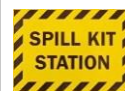

**Spill Kit**  
Located directly in front of Storage shed



 
**Emergency Eye Wash**  
Located at Slump Stand & Batch Office

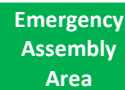

**Emergency Assembly Area**  
Located at Gate 1, near the Visitor parking area. Follow the pathway directional arrows as indicated on the map.



 **Main Electrical**  
Located beside Loading Bay

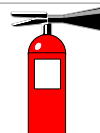




**Fire Extinguishers**  
Located in the following areas:  
Site Office, Batch Office, Load Bay (level 1), directly in front of Loading Bay, Storage Shed, Front End Loader, all trucks are equipment with fire extinguishers.









### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

-  **Vehicle Route**  
Enter & Exit via Gate 1.  
Follow the direction of the vehicle route, steps 1 - 3. At step 2, reverse into the visitor parking area.  
Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
-  **Reverse Entry**
-  **Visitor Parking – reverse entry**  
All visitors must report to the Site office immediately upon arrival.
-  To access the Site office and site facilities, follow the pathway directional arrows, as indicated on the map.
- Driving Rules**
  - 10 km/hr speed limit, unless otherwise marked.
  - Obey road rules.
  - Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
  - Drive to conditions.
  - No hand-held mobile device whilst driving.






# Traffic and Pedestrian Management Plan

## Courier & Heavy Vehicle Delivery





Boral Concrete – Jannali Rd, Dubbo



### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

-  **Vehicle Route**  
Enter & Exit via Gate 1. Driver must call on channel 31 prior to entering and upon exiting site.  
Follow the direction of the vehicle route, steps 1 - 3.
  - At step 2, reverse into the unloading area
  - Once unloading is complete, follow step 3 to exit the site.
 Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
-  **Reverse Entry**
-  **Delivery Location – reverse entry**
-  To access the Office and site facilities, follow the pathway directional arrows, as indicated on the map.

#### Driving Rules

- 10 km/hr speed limit, unless otherwise marked.
- Obey road rules.
- Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
- Drive to conditions.
- No hand-held mobile device whilst driving.



## Tipper Site Map

(Driver must contact office on UHF channel 31 prior to entering site)



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant



#### Vehicle Route

Enter via Gate 1. Exit via Gate 2. Driver must call on channel 31 prior to entering and exiting site.

Follow the direction of the vehicle route, steps 1 - 6.

- At step 3, reverse into the stockpile area to discharge load.
- Once discharging is complete, follow steps 4 - 6 to exit the site. Upon exiting, Tippers must give way to Agitators and Loader operating in the Load alley.

Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



#### Reverse Entry



#### Tipper Discharge Location – reverse entry

- Unloading into the overhead bins is not permitted.
- Tippers are not permitted to travel beyond the Admixture bund area.
- No dogs allowed to unload in the 10mm bins due to uneven ground.
- Unhook & re-hook trailers in the Trailer Parking area

#### Driving Rules

- 10 km/hr speed limit, unless otherwise marked.
- Obey road rules.
- Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
- Drive to conditions.
- No hand-held mobile device whilst driving.



## Powder Tanker Site Map

(Driver must contact office on UHF channel 31 prior to entering site)



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant



#### Vehicle Route

Enter via Gate 1. Exit via Gate 2. Driver must call on channel 31 prior to entering and exiting site.

Follow the direction of the vehicle route, steps 1 - 6.

- At step 1, stop and collect keys from Site office.
- At step 3, reverse to the discharge points
- Once discharging is complete, follow steps 4 - 6 to exit the site. Upon exiting, Tankers must give way to Agitators and Loader operating in the Load alley.

Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



#### Reverse Entry

#### Tanker Parking

Tanker Park and Discharge Location - Reverse entry



#### Silo Fill Points

Location 1 – Fly Ash  
Location 2 – SL

#### Driving Rules

- 10 km/hr speed limit, unless otherwise marked.
- Obey road rules.
- Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
- Drive to conditions.
- No hand-held mobile device whilst driving.



# Traffic and Pedestrian Management Plan

## Admix Bulk Tanker Site Map

(Driver must contact office on UHF channel 31 prior to entering site)



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

- Vehicle Route**  
Enter via Gate 1. Exit via Gate 2. Driver must call on channel 31 prior to entering and exiting site.  
Follow the direction of the vehicle route, steps 1 - 6.
  - At step 2, forward entry to the discharge point.
  - Once discharging is complete, follow step 3 to reverse from discharge point, then steps 4-6 to exit the site. Upon exiting, Tankers must give way to Agitators and Loader operating in the Load alley.
- Reverse Exit**
- Tanker Parking**
- Admixture Fill Points**
- Driving Rules**
  - 10 km/hr speed limit, unless otherwise marked.
  - Obey road rules.
  - Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
  - Drive to conditions.
  - No hand-held mobile device whilst driving.



## Agitator Map 1 - Washout

Boral Concrete – Jannali Rd, Dubbo



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

- Vehicle Route**  
Enter via Gate 1. Driver must call on channel 31 prior to entering site.  
Follow the direction of the vehicle route, steps 1 - 6.
  - At step 3, reverse to the Washout Bays.
  - Once washout is complete, follow steps 4 – 6 to proceed to the Agitator parking area. Give way to Agitators and Loader operating in the Load alley.
 Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
- Reverse Entry**
- 1 2 3  
Washout Bays **Washout Bays**  
Reverse into the washout and waste collection pits. Wash-out pipes are located at each pit.
- To access the Office and site facilities, follow the pathway directional arrows as indicated on the map.**
- Driving Rules**
  - 10 km/hr speed limit, unless otherwise marked.
  - Obey road rules.
  - Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
  - Drive to conditions.
  - No hand-held mobile device whilst driving.






## Agitator Map 2 – Load Agitator (1st Load)



Boral Concrete – Jannali Rd, Dubbo






### Pedestrians

-  **Protected Walkway**
-  **Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
-  **Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

-  **Vehicle Route**  
Follow the direction of the vehicle route, steps 1 - 5.
  - At step 1 & 2, exit the parking area and reverse into the Load Bay.
  - Once loading is complete, follow step 3 to drive forward to the Slump Stand.
  - Once slumping is complete, follow steps 4 & 5 to exit the site via Gate 2. Driver must call on channel 31 prior to exiting site.
 Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.
-  **Reverse Entry**

-  **Load Bay**  
**Load Bay – Reverse entry**
-  **Slump Stand**  
**Slump Stand – forward entry**

-  To access the Office and site facilities, follow the pathway directional arrows as indicated on the map.

#### Driving Rules

- 10 km/hr speed limit, unless otherwise marked.
- Obey road rules.
- Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
- Drive to conditions.
- No hand-held mobile device whilst driving.



## Agitator Map 3 – Load Agitator (2nd Load)

 
Boral Concrete – Jannali Rd, Dubbo



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

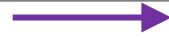

#### Vehicle Route

- Enter via Gate 2 and follow the direction of the vehicle route, steps 1 - 4. Driver must call on channel 31 prior to entering site.
- At step 1 & 2, forward into the parking area, then reverse into the Load Bay.
  - Once loading is complete, follow step 3 to drive forward to the Slump Stand.
  - Once slumping is complete, follow step 4 to exit the site via Gate 2. Driver must call on channel 31 prior to exiting site.
- Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.



#### Reverse Entry



**Load Bay** – Reverse entry



**Slump Stand** – forward entry



To access the Office and site facilities, follow the pathway directional arrows as indicated on the map.

#### Driving Rules

- 10 km/hr speed limit, unless otherwise marked.
- Obey road rules.
- Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
- Drive to conditions.
- No hand-held mobile device whilst driving.



# Traffic & Pedestrian Management Plan

## Washout Waste Collection Site Map

(Driver must contact office on UHF channel 31 prior to entering site)



### Pedestrians

- Protected Walkway**
- Designated Walkway**  
Pedestrians **MUST** give way to vehicles and plant
- Pedestrian Exclusion Zone**  
Only authorised pedestrians are permitted to conduct work in operational areas

### Vehicles and Plant

- Vehicle Route**  
Enter via Gate 1. Exit via Gate 2. Driver must call on channel 31 prior to entering and exiting site.  
Follow the direction of the vehicle route, steps 1 - 5.
  - At step 3, reverse to the loading area.
  - Once loading is complete, follow steps 4 & 5 to exit the site. Upon exiting, driver must give way to Agitators and Loader operating in the Load alley.
- Drivers **MUST** not exit their vehicle unless they can access a designated walkway or to complete designated work.

#### Reverse Entry

**Loading area** Washout Waste Loading Location - Reverse entry

#### Driving Rules

- 10 km/hr speed limit, unless otherwise marked.
- Obey road rules.
- Front End Loader and Forklift have right of way in vehicle operating areas. Always establish positive communication (verbal and/or visual contact) with operator before approaching within 20 metres. Communicate with the Loader operator via UHF Channel 31.
- Drive to conditions.
- No hand-held mobile device whilst driving.